

PPIC3[®]

DIAGNOSTIC SYSTEM



MANUAL



ENGLISH, VERSION 1.0

© COPYRIGHT BSR SVENSKA AB

USB cable

OBDII cable

*Connect to
the computer.*

*Connect to
the car.*




READ DTCS

Connect PPC to the car's diagnostic connector with the OBDII cable. The diagnostic connector is located in the dash board under the steering wheel (more info about the location at www.bsr.se/ppc). Turn the ignition on.



Select "Read DTCs" and press enter.

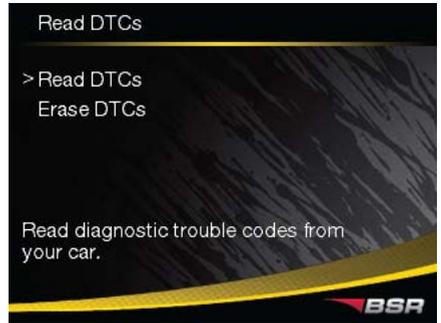


Press enter to start reading.


Do not forget to turn the ignition on.
How to turn the ignition on is described at www.bsr.se/ppc.




Reading DTCs.

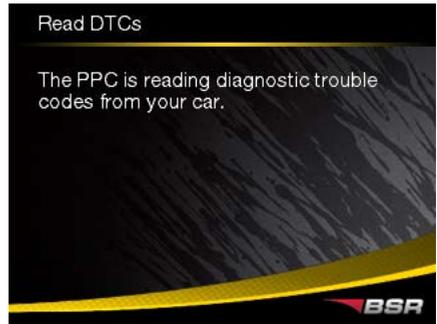

All DTCs that have been found is displayed. You can browse up and down with the arrows. Go back with the left arrow.

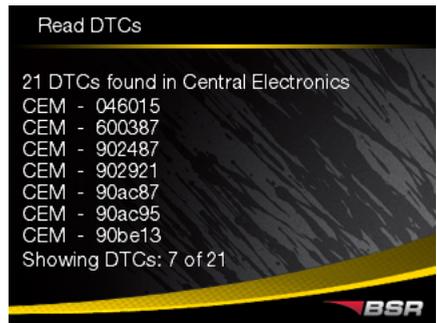

All DTCs are saved in the PPC's memory, which can hold several readouts. You can, anytime, send all DTCs to your customer page www.bsr.se/ppc by simply synchronizing the PPC via the Internet. On the customer page a detailed DTC report with explaining texts is displayed. The DTCs are sorted by each car.

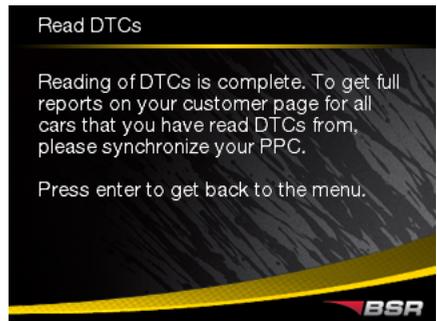


ERASE DTCS

Connect PPC to the car's diagnostic connector with the OBDII cable. The diagnostic connector is located in the dash board under the steering wheel (more info about the location at www.bsr.se/ppc). Turn the ignition on.




Select "Erase DTCs" and press enter.

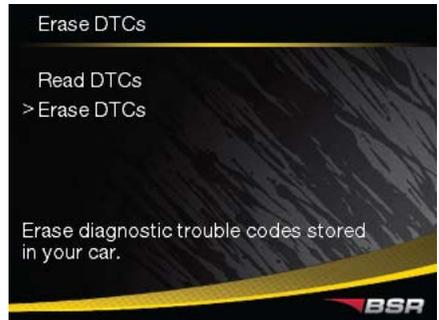


Press enter to erase DTCs.

Do not forget to turn the ignition on. How to turn the ignition on is described at www.bsr.se/ppc.

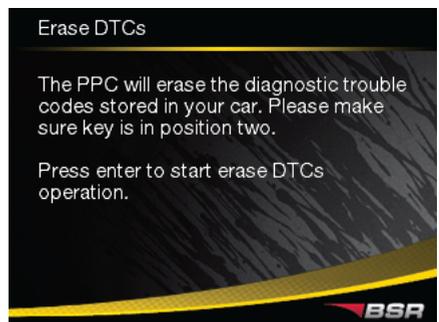

Erasing DTCs.

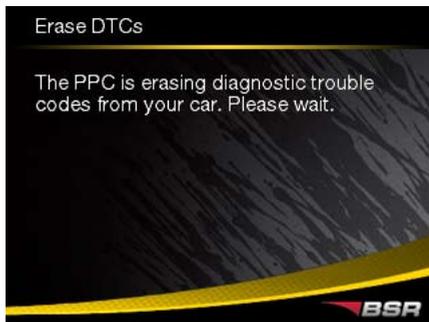

You can now disconnect the PPC from your car.



HOW TO INSTALL PPC SYNC 3


- 1 It is necessary to install the PPC Sync 3 program to be able to send the DTCs from the PPC unit to your customer page.

Enter your customer page www.bsr.se/ppc and log in with your PPC number and password that were sent to your e-mail. Click on the PPC Sync 3 link to start the installation.

This is how the installation looks when using Windows Vista. The installation might differ slightly on other operation systems.




- 2 Click Next.

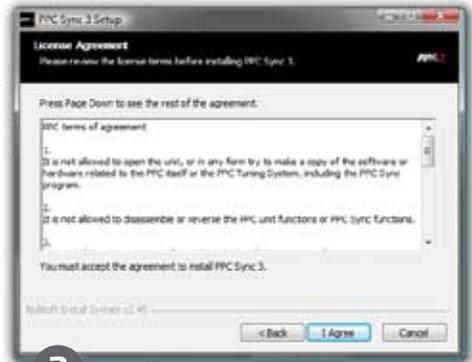


- 3 If you agree, click I Agree.




- 4 Click Next.

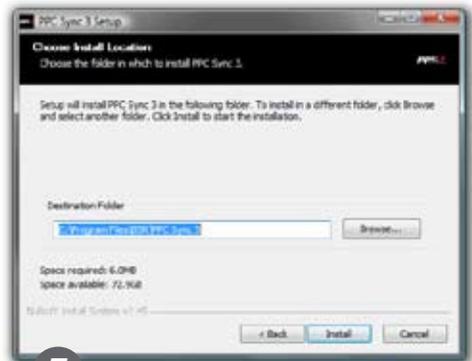

- 5 Click Install.

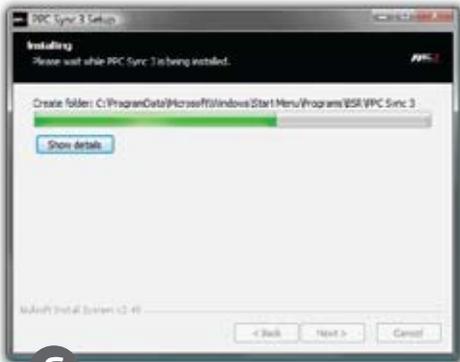

6

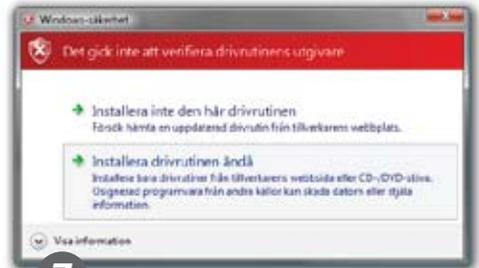

7

Click Install this driver software anyway.




8

Click Finish.



9

Now connect PPC to your computer with the USB cable.

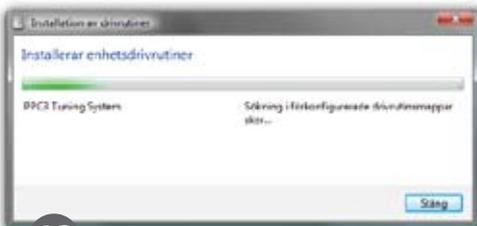

10




11

12 The installation is complete! You can now use the PPC Sync 3 program.

HANDLE DTCS VIA PPC SYNC 3 AND THE CUSTOMER PAGE



1. *Connect PPC to your computer with the USB cable. The computer must be connected to the Internet.*
2. *Start the program PPC Sync 3.*
3. *Fill in the PPC number and password that were sent to your e-mail. (Only necessary to do once.)*
4. *Click "Synchronize" to send the DTCS from your PPC unit to the customer page.*

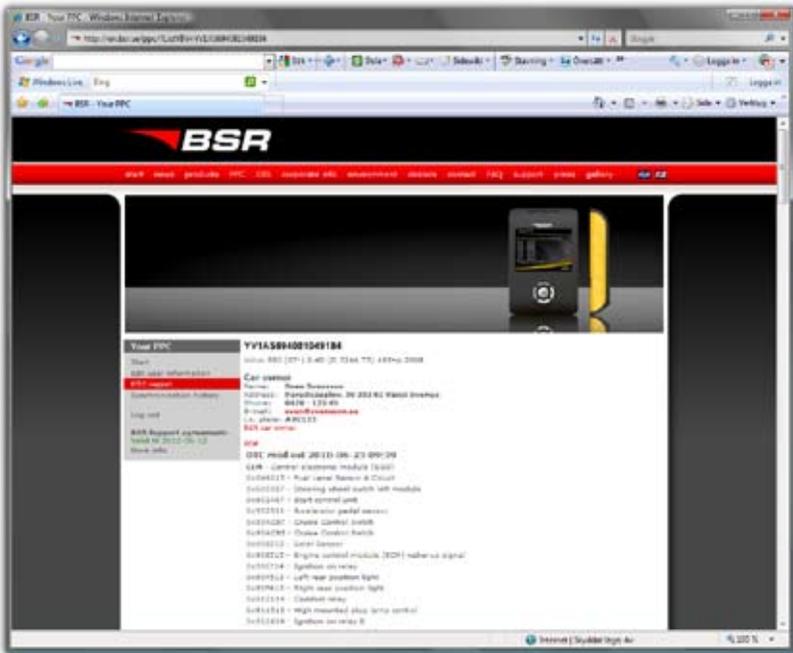

www.bsr.se/ppc

5. Enter your customer page **www.bsr.se/ppc** and log in with your PPC number and password.
6. Click on “DTC report” and choose one of the cars that you have read DTCs from. The DTCs are sorted by the date of the reading and by the control units of the car. They are displayed with an explaining text message.

Click on “PDF” to create a printer friendly PDF version of the DTC report.

SPECIFICATIONS FOR PPC SYNC 3

Compatible with: Windows 7/Vista/XP/2000/ME/98/NT

Internet protocol: TCP/IP port 143

We recommend you to turn off any firewalls before using PPC Sync 3.



BSR Svenska AB

Deltavägen 9

352 45 Växjö

tel: 0470 - 70 96 70

fax: 0470 - 70 96 75

e-mail: info@bsr.se

website: www.bsr.se

support: www.bsr.se/support